

INSTRUCTION MANUAL

FS202-V35 FOOT SWITCH

Read following instructions before attempting to use. Keep this manual always in the vicinity of use for your reference. Before using the unit, check if there is any damage on this product due to transport condition. If any damage was found, contact our Minimo dealer.

SAFETY PRECAUTIONS

⚠ WARNING (Indicates that incorrect operation presents significant danger of accident resulting in death or serious injury to user.)

- Wear an appropriate eye protection and a respiratory protective equipment when using the handpiece.
- Do not attempt to disassemble and remodel this product. May cause of malfunction, fire and / or electric shock.
- Hold motor (handpiece) tightly when turn the unit on.

⚠ CAUTION (Indicates that incorrect operation presents possibility of injury to user or damage to unit.)

- Do not use this product in humid place and in place with much corrosive gas and chemicals. May cause of fire and / or electric shock.
- Do not use this product in condensation condition. May cause of electric shock.
- Use this product within temperature from 0°C to 40°C.
- Keep this product away from children.
- Prevent dust, oil, water, etc. from entering inside. If entering, ask our Minimo dealer for repairing.
- Do not put heavy material on cord. The cord may be damaged and cause of fire and electric shock.
- Keep cord away from thermal appliance. The cord may be melted and cause of fire and electric shock.

1. FUNCTION

The foot switch remains On while pressing and turns Off while releasing.

2. OPERATION

Please refer to the Operation Manual of Premo-V35 for each name of part and function of Controller.

- ①Connect Foot Switch to Foot Switch Socket on the bottom side of Controller.
* Do not connect Foot Switch to Controller while Controller is “On” .
- ②Hold handpiece tightly, step on Foot Switch and then handpiece will start running.
- ③Release foot from Foot Switch to stop running handpiece.

●HOW TO RESET THE OVERLOAD ALERM

In case safety function was activated and stops flowing electric current with displaying “OL” , turn Foot Switch off and then overloading will be canceled.

MINITOR CO., LTD. JAPAN

21-1 Ryogoku 3-chome, Sumida-ku, Tokyo 130-0026 JAPAN
Phone +81 3 (6630) 5800 FAX +81 3 (6630) 5795

Products are subject to change without notice.

2020.03.01 IME-FS-V35