

- ③ HOLD THE HANDPIECE FOR SURE, THEN DEPRESS THE PEDAL OF THE FOOTSWITCH TO TURN THE POWER ON. THE BEEP WILL BE SOUND AS THE POWER IS ON.
- ④ TO TURN OFF, RELEASE THE PRESSURE TO THE PEDAL OR DEPRESS THE PEDAL AGAIN (DEPENDS ON THE MODEL OF THE FOOTSWITCH). THE BEEP WILL SOUND AS THE POWER IS OFF.

Attn) IT CAN BE TURNED OFF BY REMOTE SWITCH ON THE HANDPIECE AND ON/OFF SWITCH OF THE POWER PACK. BUT IF SO, THE STATION SELECTION WILL BE ALSO RESET. THE STATION HAS TO BE SELECTED AGAIN AS MENTIONED ABOVE. (② OF ABOVE) AS LONG AS OPERATING BY FOOTSWITCH, THE STATION SELECTION WILL BE KEPT.

#### ○ CHANGE THE STATION

ONLY ONE STATION CAN BE SELECTED. (CANNOT USE TWO OR MORE STATIONS SIMULTANEOUSLY)  
 PUSH THE REMOTE SWITCH OF THE HANDPIECE UNDER SELECTED OR ON/OFF SWITCH OF AT THE SELECTED STATION OF THE POWER PACK TO RESET THE SELECTION, THEN, PUSH THE REMOTE SWITCH OR ON/OFF SWITCH FOR DESIRED HANDPIECE.

#### ● HOW TO RESET THE OVERLOAD ALERM

WHEN THE SAFETY SYSTEM IS ACTUATED BY OVERLOAD, SWITCH OFF BY THE FOOT SWITCH THEN IT WILL BE RESET WITH BEEP SOUND, (BEEP WILL NOT SOUND IF THE POWER PACK IS C10M, C11M, C12M)

Attn: IF THE POWER PACK IS ONE OF THOSE

P201, P211, P221, C301, C311, C321, C2012, C2112 AND C2212, IT CAN BE RESET BY REMOTE SWITCH ON THE HANDPIECE AND ON THE PANEL OF THE POWER PACK. BUT IF YOU DO SO, THE STATION SECTION ALSO WILL BE RESET. IN SUCH A CASE, YOU HAVE TO SELECT THE STATION AGAIN. SEE THE INSTRUCTION MANUAL OF THE POWER PACK.

**MINITOR CO., LTD. JAPAN**

21-1 Ryogoku 3-chome, Sumida-ku, Tokyo 130-0026 JAPAN  
 Phone +81 3 (6630) 5800 FAX +81 3 (6630) 5795

# INSTRUCTION MANUAL

FS201 · FS211 · VC301 · VC302 FOOT SWITCH

READ FOLLOWING INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING TO USE.  
 KEEP THIS MANUAL ALWAYS IN THE VICINITY OF USE FOR YOUR REFERENCE.  
 BEFORE USING THE UNIT, CHECK IF THERE ARE ANY DAMAGES ON THE UNIT DUE TO TRANSPORT CONDITIONS. IF ANY DAMAGES ARE FOUND, CONTACT OUR MINIMO DEALER.

## SAFETY PRECAUTIONS

**⚠ WARNING** (INDICATES THAT INCORRECT OPERATION PRESENTS SIGNIFICANT DANGER OF ACCIDENT RESULTING IN DEATH OR SERIOUS INJURY TO THE USER.)

- WEAR AN APPROPRIATE EYE PROTECTION AND A DUST PROTECTING MASK WHEN USING THE HANDPIECE.
- DO NOT DISASSEMBLE AND REMODEL THE UNIT. ANY ACCIDENT OR MALFUNCTION CAUSED BY DISASSEMBLING AND/OR REMODELING WILL NOT BE COVERED BY OUR RESPONSIBILITY.


**⚠ CAUTION** (INDICATES THAT INCORRECT OPERATION PRESENTS POSSIBILITY OF INJURY TO THE USER OR DAMAGE TO THE UNIT.)

- DO NOT USE THE UNIT IN EXCESSIVELY HUMID PLACE. THE CONDENSATION OF VAPOR ON AND/OR INSIDE OF THE UNIT CAUSES A MALFUNCTION OF THE UNIT, A SHORT CIRCUIT, FIRE OR AN ELECTRIC SHOCK
- DO NOT USE THE UNIT WHERE CORROSIVE GASES AND CHEMICALS POSSIBLY EXIST.
- THE AMBIENT TEMPARATURE SHOULD BE IN THE RANGE OF 0° ~ 40° C
- KEEP THE UNIT AWAY FROM CHILDREN.
- AVOID ANY HEAVY IMPACT TO THE UNIT. DO NOT DROP!
- KEEP ALL LIQUIDS SUCH AS OIL, WATER, AND ETC. OFF THE UNIT. THIS MAY CAUSE A MALFUNCTION OF THE UNIT, CATCH FIRE AND/OR GET AN ELECTRIC SHOCK.
- DO NOT PUT ANY HEAVY GOODS ON THE CORD. THIS MAY CAUSE A FLAW ON THE CORD LEADING A MALFUNCTION OF THE UNIT.

## 1. FUNCTION

### ◇FS201


- ON-OFF TYPE FOOT SWITCH WHICH REMAINS "ON" AS LONG AS PRESSED. RELEASE THE PRESSURE TO TURN OFF.

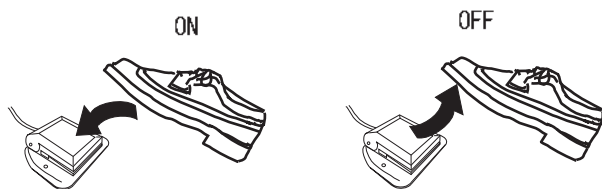

### ◇FS211 (TWO INTERCHANGEABLE OPERATION MODES)

- ON-OFF TYPE WITH HAVING TWO MODES TO TURN ON AND OFF. A-MODE AND B-MODE ARE INTERCHANGEABLE.

⇒ SWITCH TO "A-MODE"  
REMAINS "ON" ONCE PRESSED  
IRRESPECTIVE OF RELEASING PRESSURE.  
PRESS AGAIN TO TURN OFF.

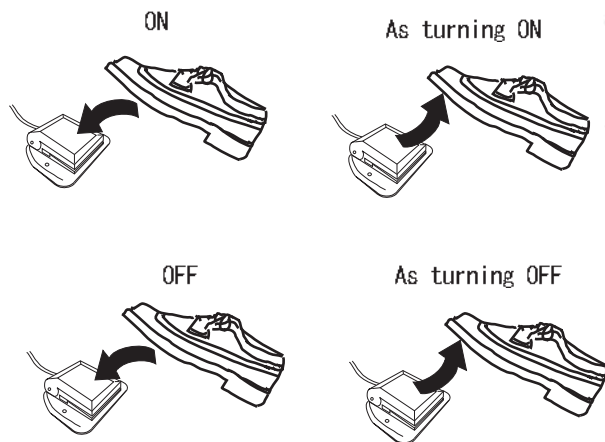

⇒ SWITCH TO "B-MODE"  
REMAINS "ON" AS LONG AS PRESSED  
RELEASE THE PRESSURE TO TURN OFF.  
(SAME FUNCTION AS FS201.)


### ◇VC301·VC302 (VARIABLE SPEED CONTROL TYPE)

- IN ADDITION TO THE ON/OFF SWITCH, THE VARIABLE SPEED CONTROL FOR THE HANDPIECE (POWER CONTROL FOR THE POLYTOR) IS PROVIDED. THE SPEED OR POWER IS TO BE CONTROLLED BY THE PEDAL OF THE FOOTSWITCH.

※ADJUSTING THE MAXIMUM SPEED/POWER

- ①CONNECT THE HANDPIECE, AND DEPRESS THE PEDAL OF VC301 AT THE MOST.
- ②TURN THE POWER CONTROL KNOB ON THE PANEL OF THE POWER PACK TO ADJUST THE SPEED/POWER TO POSSIBLE MAXIMUM SPEED YOU WANT.

THIS WILL BE THE MAXIMUM SPEED WHEN THE PEDAL IS DEPRESSED MOST.

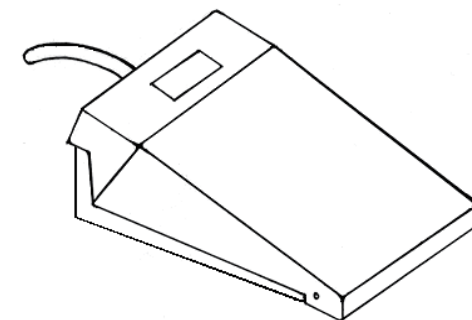

## 2. OPERATION

◇PLEASE REFER THE NAMES OF THE PARTS AND THEIR FUNCTION OF THE POWER

PACK TO THE MANUAL OF THE POWER PACK.

### ○SINGLE STATION TYPE (C101·C111·C121, C10M·C11M·C12M)

- ①PLUG IN THE FOOTSWITCH TO THE FOOTSWITCH SOCKET OF THE POWER PACK.

※AS THE FOOTSWITCH IS CONNECTED TO THE POWER PACK, THE ON/OFF SWITCH AT THE STATION OF THE POWER PACK AND REMOTE SWITCH OF THE HANDPIECE WILL NOT OPERATE.

- ②HOLD THE HANDPIECE FOR SURE, THEN DEPRESS THE PEDAL OF THE FOOTSWITCH TO TURN THE POWER ON. IF THE POWER PACK IS ONE OF C101, C111 AND C121, THE BEEP WILL BE SOUND AS THE POWER IS ON.

【THE OUTPUT LAMP OF THE POWER PACK WILL TURN TO GREEN】

- ③TO TURN OFF, RELEASE THE PRESSURE TO THE PEDAL OR DEPRESS THE PEDAL AGAIN (DEPENDS ON THE MODEL OF THE FOOTSWITCH). THE BEEP WILL SOUND AGAIN AS THE POWER IS OFF IF THE POWER PACK IS ONE OF C101, C111 AND C121.

### ○MULTI STATION TYPE (P201·P211·P221, C301·C311·C321 ·C2012·C2112·C2212)

- ①PLUG IN THE FOOTSWITCH TO THE FOOTSWITCH SOCKET OF THE POWER PACK.

- ②PUSH THE REMOTE SWITCH OF THE HANDPIECE OR THE ON/OFF SWITCH AT THE STATION OF THE POWER PACK TO SELECT THE STATION.

※THE FOOTSWITCH WILL NOT OPERATE WITHOUT STATION SELECTION.