

4. THE COLLET CHUCK OPTIONS

H051 APPLICABLE COLLET CHUCKS

SHANK DIA.	φ 1.0	φ 1.2	φ 1.4	φ 1.6	φ 1.8	φ 2.0	φ 2.34	φ 3.0	φ 3.175
CODE NO.	KP-050	KP-051	KP-007	KP-005	KP-052	KP-031	KP-036	KP-032	KP-033

5. MAINTENANCE

● THE CHIPS AND DUST MAY REMAIN IN THE COLLET CHUCK.
CLEAN IT BY TAKING OUT THE COLLET CHUCK FROM THE HANDPIECE.

● WHEN THE HANDPIECE GETS DIRTY, WIPE OUT WITH CLOTH
MOISTENED WITH LUKEWARM WATER OR DETERGENT.

◀WHEN THE COLLET RELEASE RING IS TOO TIGHT TO TURN▶


IF YOU TURN THE COLLET RELEASE RING TO SET AS YOU
HAPPENLY LEAVE THE COLLET CHUCK NOT COMPLETELY
SCREW IN, THE COLLET RELEASE RING IS VERY TIGHT TO TURN.
IN THAT CASE, FOLLOW THE STEPS AS BELOW.

1) LOOSEN THE “a” PART (SEE THE FIG. ON THE RIGHT)
BY HANDS (JUST ONE OR TWO TURNS).
WHEN IT TOO HARD TO TURN, WEAR A RUBBER GLOVE
FOR NOT TO SLIP.

2) THEN, TURN THE COLLET RELEASE RING TO “R” POSITION TILL IT
LOCKS AT THE POSITION.

3) TIGHTEN BACK THE “a” PART, AND INSERT THE TEST ROD INTO THE
COLLET, THEN, SCREW THE COLLET CHUCK THOROUGHLY WITH
THE BOX-WRENCH.

4) FINALLY, TURN THE COLLET RELEASE RING TO “S” POSITION.

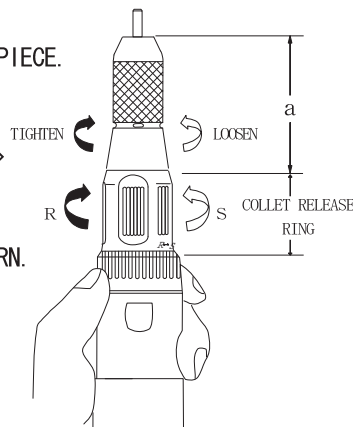

6. TROUBLE SHOOTING

☆ THE MOTOR DOES NOT OPERATE.

- CHECK IF THE AC CABLE IS CERTAINLY PLUGGED IN.
- CHECK IF THE FUSE OF THE POWER PACK IS BURNED OUT.
- CHECK IF THE CURLED CORD IS CERTAINLY CONNECTED.
- CHECK IF THE CARBON BRUSH OF THE MOTOR IS WORN OUT.
- CHECK IF THE COLLET RELEASE LEVER IS IN “SET” POSITION.

☆ THE HANDPIECE SWITCH DOES NOT OPERATE.

- CHECK IF THE FOOT SWITCH IS CONNECTED TO THE POWER PACK.
- CHECK IF THE POWER PACK IS EITHER MINIMO 1 SERIES OR 7 SERIES.

MINITOR CO., LTD. JAPAN

21-1 Ryogoku 3-chome, Sumida-ku, Tokyo 130-0026 JAPAN
Phone +81 3 (6630) 5800 FAX +81 3 (6630) 5795

Products are subject to change without notice.

2020.07.01 IME-H051

INSTRUCTION MANUAL

H051 AIR HEAD

READ FOLLOWING INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO USE.
KEEP THIS MANUAL ALWAYS IN THE VICINITY OF USE FOR YOUR REFERENCE.
BEFORE USING THE UNIT, CHECK IF THERE ARE ANY DAMAGES ON THE UNIT DUE
TO TRANSPORT CONDITIONS. IF ANY DAMAGES ARE FOUND, CONTACT OUR
MINIMO DEALER.

SAFETY PRECAUTIONS

⚠ WARNING (INDICATES THAT INCORRECT OPERATION PRESENTS
SIGNIFICANT DANGER OF ACCIDENT RESULTING IN DEATH OR
SERIOUS INJURY TO THE USER.)

- DO NOT START TO RUN THE HANDPIECE WHILE ITS COLLECT CHUCK OPENS.
FAILURE TO DO SO COULD CAUSE THE MOTOR TO BE OVERHEATED, RESULTING IN FIRE OR FAILURE.
- MAKE SURE WHETHER OR NOT THE HANDPIECE RUNS AFTER SWITCHING ON.
IF THE HANDPIECE DOES NOT RUN AFTER SWITCHING ON, STOP USING IT.
FAILURE TO DO SO COULD CAUSE THE MOTOR TO BE OVERHEATED, RESULTING IN FIRE OR FAILURE.
- WEAR AN APPROPRIATE EYE PROTECTION AND A DUST PROTECTING MASK WHEN USING THE HANDPIECE.
- TURN OFF THE MAIN SWITCH IMMEDIATELY AND UNPLUG THE AC CABLE WHEN ONE OR MORE OF THE
FOLLOWINGS ARE RECOGNIZED. SMOKING; NASTY SMELL; STRANGE NOISE.
- DO NOT DISASSEMBLE AND REMODEL THE UNIT. ANY ACCIDENT OR MALFUNCTION CAUSED BY DISASSEM-
BLING AND/OR REMODELING WILL NOT BE COVERED BY OUR RESPONSIBILITY.
- NEVER PUSH THE SENTAN TOOL HARD ONTO THE WORKPIECE. EXCESSIVE FORCE ON THE TOOL WILL CAUSE
DAMAGE TO THE TOOL AND ALSO REDUCE THE POWER OF THE MOTOR.
- WHEN TURNING ON THE POWER SWITCH, HOLD THE HANDPIECE FIRMLY.
- DO NOT TOUCH ANY REVOLVING BODIES SUCH AS SENTAN TOOL AND COLLET CHUCK.

⚠ CAUTION (INDICATES THAT INCORRECT OPERATION PRESENTS
POSSIBILITY OF INJURY TO THE USER OR DAMAGE TO THE UNIT.)


- DO NOT USE THE UNIT IN EXCESSIVELY HUMID PLACE. THE CONDENSATION OF VAPOR ON AND/OR INSIDE
OF THE UNIT CAUSES A MALFUNCTION OF THE UNIT, A SHORT CIRCUIT, FIRE OR AN ELECTRIC SHOCK
- DO NOT USE THE UNIT WHERE CORROSIVE GASES AND CHEMICALS POSSIBLY EXIST.
- THE AMBIENT TEMPARATURE SHOULD BE IN THE RANGE OF 0° ~ 40° C
- KEEP THE UNIT AWAY FROM CHILDREN.
- AVOID ANY HEAVY IMPACT TO THE UNIT. DO NOT DROP!
- KEEP ALL LIQUIDS SUCH AS OIL, WATER, AND ETC. OFF THE UNIT. THIS MAY CAUSE A MALFUNCTION OF
THE UNIT, CATCH FIRE AND/OR GET AN ELECTRIC SHOCK.
- READ THE INSTRUCTION MANUAL OF THE MOTOR AND THE POWER PACK AS WELL.

1. SPECIFICATION · STANDARD ACCESSARIES

(The accessories are subject to change without any notice)

- ◇ RATED SPEED : 50,000min⁻¹
- ◇ RATED WHEEL DIAMETER : Φ 30
- ◇ APPLICABLE MOTORS :
KV112H, KV212H, KM112H
- ◇ SLEEVE COLLET ϕ 2.34 (PA2001) · · · 1pc.
- ※ENABLE TO USE TOOL WITH ϕ 2.34 SHAFT WITHOUT CHANGING TO COLLET CHUCK ϕ 3.0.
THE COLLET CHUCK ϕ 3.0 (KP-032) IS MOUNTED.
- ◇ BOX-WRENCH (KP-600A) · · · 1pc.
- ◇ JOINT SHAFT HOLD PLATE (KP-M01) · · · 1pc.

2. NAMES OF PARTS

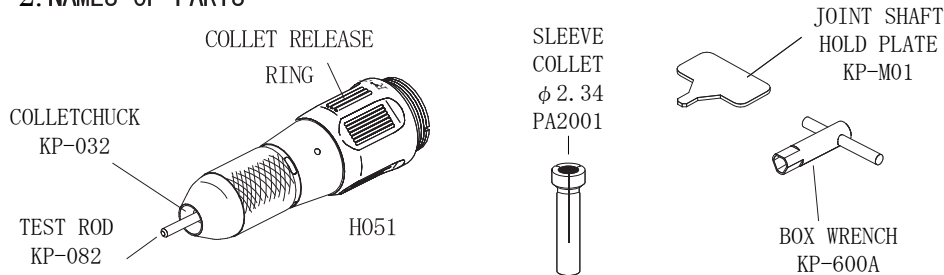


3. INSTALLATION

3-1. ATTACHING TO THE MOTOR

FOR YOUR SAFETY, DO NOT CONNECT THE MOTOR TO THE POWER PACK WHEN ATTACHING OR DETACHING THE HEAD TO THE MOTOR.


- 1) INSERT THE H051 HEAD ONTO THE MOTOR WITH PLACING THE CLAW OF THE HEAD IN A GROOVE OF THE MOTOR.
- 2) TIGHTEN THE JOINT RING TO SECURE THE HEAD IN POSITION.
- * 4 GROOVES ARE PROVIDED ON THE MOTOR SO THAT YOU CAN CHOOSE A SUITABLE REMOTE SWITCH POSITION IN ACCORDANCE WITH YOUR OPERATION CONDITIONS.

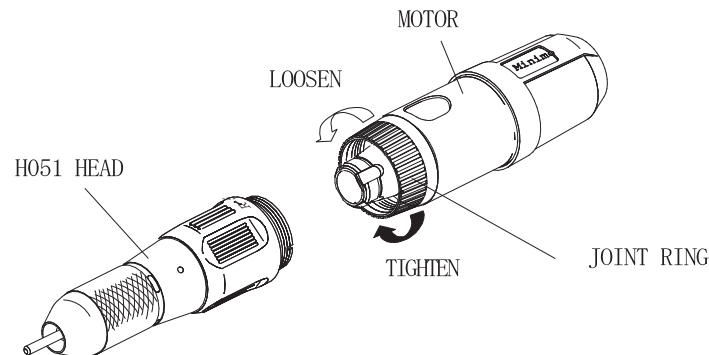

3-2. CHANGING THE SENTAN TOOLS


- ⚠ ALWAYS KEEP THE POWER OFF WHEN CHANGING THE TOOLS.
- ⚠ NEVER TURN THE COLLET RELEASE LEVER WHEN THE MOTOR IS ROTATING.

- 1) HOLD THE MOTOR AND TURN THE COLLET RELEASE RING TO THE RIGHT (RELEASE) TILL IT LOCKS IN THE POSITION.
- 2) PULL OUT THE TEST ROD OR SENTAN TOOL AND INSERT THE SENTAN TOOL SUITABLE TO THE WORK. THEN, TURN THE COLLET RELEASE RING BACK TO THE LEFT (SET) TILL IT LOCKS IN THE POSITION.
- 3) MAKE SURE THE TOOL IS SET FIRMLY BEFORE STARTING THE MOTOR.
- ※THE H011 HEAD IS SHIPPED WITH A TEST ROD TO PROTECT THE COLLET. CHANGE IT TO THE SENTAN TOOL SUITABLE TO YOUR WORK.
- ◆THE MOTOR WILL NOT ROTATE IF THE COLLET RELEASE RING IS IN THE RELEASE POSITION.

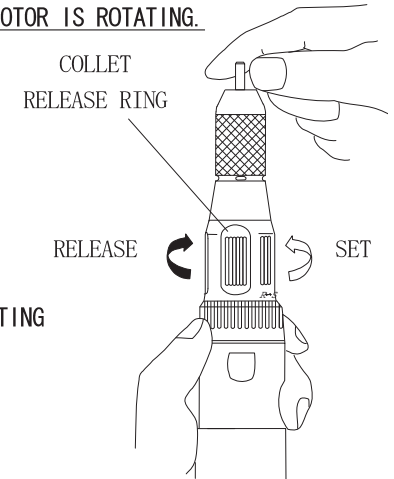

3-3. CHANGING THE COLLET CHUCK

- 1) TAKE OUT THE SENTAN TOOL.
- 2) KEEP THE COLLET RELEASE LEVER IN "RELEASE" POSITION AND INSERT THE TEST ROD.
- 3) TURN THE COLLET CHUCK BY THE V-SPANNER TO LOOSEN.
- 4) IF THE COLLET CHUCK CANNOT BE LOOSENED, TAKE THE MOTOR APART, AND INSERT THE JOINT SHAFT HOLD PLATE INTO THE CROSS CUT HOLE AT THE BOTTOM OF THE CLAMP HEAD.
- 5) HOLDING THE SHAFT WITH THE PLATE, HOOK THE V-SPANNER TO THE COLLET CHUCK AND LOOSEN IT.
- 6) PULL OUT THE COLLET CHUCK AND SCREW IN THE NEW COLLET CHUCK. THE TEST ROD IS INSERTED INTO THE NEW COLLET CHUCK PROTECTING THE CHUCK TO TIGHTEN THE COLLET CHUCK WITH BOX-WRENCH.

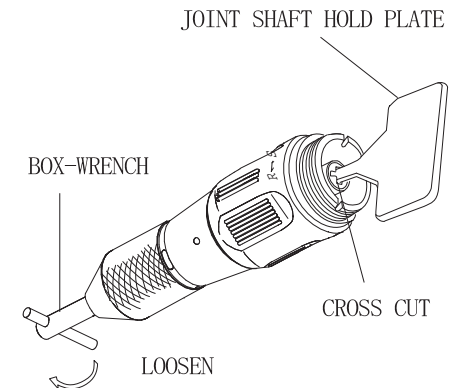

- ⚠ WHEN THE INSIDE DIAMETER OF THE COLETTE CHUCK IS LESS THAN Φ 2mm, BOX-WRENCH OF THE ATTACHMENT CANNOT BE USED. PLEASE CONTACT TO OUR NEAREST OFFICE.