

INSTRUCTION MANUAL

H81/H82

BELTARM

READ FOLLOWING INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING TO USE. KEEP THIS MANUAL ALWAYS IN THE VICINITY OF USE FOR YOUR REFERENCE. BEFORE USING THE UNIT, CHECK IF THERE ARE ANY DAMAGES ON THE UNIT DUE TO TRANSPORT CONDI-TIONS. IF ANY DAMAGES ARE FOUND, CONTACT YOUR NEAREST DEALER.

WE HAVE THREE KINDS OF BELTARM, SEE THE TABLE BELOW

MODEL	WIDTH OF THE BELT	APPLICABLE
	CAN BE MOUNTED WITH THE	BS313
	BELTS OF 4mm AND 6mm ON THE WIDTH.	BS312
H 8 1 THIN BELTARM		BS31
	CAN BE MOUNTED WITH THE BELTS OF 6mm AND 8mm ON	BS37
		BS36
	THE WIDTH.	BS33
H82 STANDARD BELTARM		

1. REPLACE THE BELTARM

JUST PULL OUT THE OLD BELTARM AND INSERT THE NEW ONE. BE SURE NOT TO BE UPSIDE DOWN. (SEE FIG. 1)


2.REPLACE THE BELT

· TO MOUNT THE BELT

HOOK THE BELT AROUND THE DRIVE PULLEY THEN, SQUEEZE THE KNOB AND HOOK THE OTHER SIDE OF THE BELT AROUND THE TOP PULEY.

(SEE FIG. 2)

· DISMOUNT THE BELT SQUEEZE THE KNOB AND LIFT THE BELT UP TO RELEASE IT.

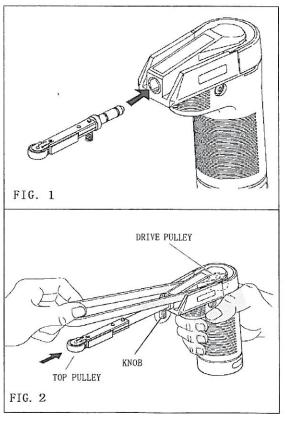

3. REPLACE THE ARMPAD

THE ARMPAD IS EXCHANGEABLE. JUST PEEL OUT THE OLD ONE AND PASTE THE NEW ONE ON THE ARM. ARMPAD IS ADHESIVE ON THE BACK. PEEL OFF THE COVERED TAPE TO PASTE IT. (SEE FIG. 3)

REFER TO EXPENDABLE SUPPLIES BELOW TO ORDER THE PARTS.

4. REPLACE THE PULLEY

THE PULLEY HAS BALLBEARING(S) IN IT. WHEN IT COMES TO ROTATE NOT SMOOTHLY, IT IS THE TIME TO REPLACE IT. REFER TO EXPENDABLE SUPPLIES BELOW TO ORDER THE PARTS.


FOR H81

FIRST, LOOSEN THE SCREW ON THE BELTARM AND WIDEN THE TOP AND BOTTOM PLATES. THEN, TAKE OUT THE PULLEY AND INSERT THE NEW ONE. (SEE FIG. 4)

CAUTION!: DO NOT WIDEN THE PLATES TOO MUCH. IT MAY BE DEFORMED.

• FOR H82

- 1. UNSCREW THE PRECISION SCREW 1.
- 2. PULL OUT THE PULLEY SHAFT (5).
- 3. TAKE OUT THE OLD RUBBER BEARING 4. (SEE FIG. 5)
- 4. SPACER $\ensuremath{\mathfrak{g}}$ is set on both sides of the New Rubber bearing $\ensuremath{\mathfrak{g}}$ and insert the one.
- INSERT PULLEY SHAFT AND TIGHTEN A SCREW .
 PLEASE PUT UP THE WASHER .

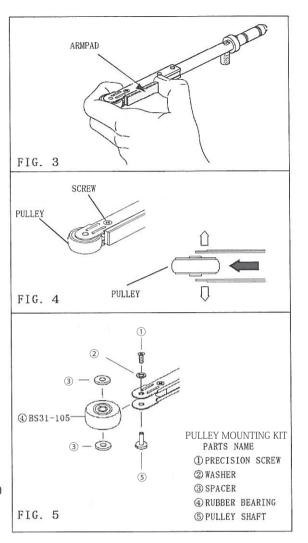

5. EXPENDABLE SUPPLIES

THE PARTS TABLE FOR BELTARM IS BELOW.

CONTACT WITH YOUR NEAREST DEALER TO ORDER (SEE OUR GENERAL CATALOGUE FOR ABRASIVE BELTS.)

NAME	BELTARM	CODE NUMBER
ARMPAD	H 8 1	BS1-272
	H 8 2	BS1-273
PULLEY	H 8 1	BS1-130
RUBBER BEARING	H 8 2	BS31-105
PULLEY MOUNTING KIT	H 8 2	BS31-140

*PARTS NOT LISTED ARE NOT AVAILABLE FOR SALE.

MINITOR CO., LTD. JAPAN

21-1 Ryogoku 3-chome, Sumida-ku, Tokyo 130-0026 JAPAN Phone +81 3 (6630) 5800 FAX +81 3 (6630) 5795