

RECIPRON

RE112/RE212 OPERATION MANUAL

A combination of C2212 conforms to EN specification EN60745-1、EN60745-2-3 EN61000-6-4、EN61000-4-2、EN61000-4-3、EN61000-4-4 EN61000-4-5、EN61000-4-6、EN61000-4-8、EN61000-4-11

# MINITOR CO., LTD. JAPAN

21-1 Ryogoku 3-chome, Sumida-ku, Tokyo 130-0026 JAPAN Phone +81 3 (6630) 5800 FAX +81 3 (6630) 5795

Products are subject to change without notice.

#### Introduction

## Thank you very much for purchasing Minimo ONE Series Ver. 2 RECIPRON.

This product is the Motor for Minitor Handpieces.Read carefully this instruction manual before use.Also read carefully the instruction manuals of D.C. power pack, and of foot switch. Please keep this instruction manual near the power pack for any operators to refer to whenever operating this system.If you lost your instruction manual, download it from our website.

#### Cautions for handling and operation

- •Read the precautions below to ensure safe use and handling. These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- •Read carefully the instruction manual of this power pack, handpieces and foot switch.
- •Keep this instruction manual near the power pack for any operators to refer to whenever operating this system.

#### About Symbols

The symbols below have the following meanings.

This symbol denotes that an instruction must be obeyed at all times.

This symbol denotes that the action is prohibited.

 
unit.

This indicates that incorrect

operation presents possibility of

## About Warning and Caution

Safety instructions are classified as Warning and Caution in accordance with the seriousness of the risk.



Caution injury to users or damage to the

Marning Warning When connecting this handpiece with a powerpack, always turn off the main switch of the powerpack. 0 OFailure to do so could result in fire, electric shock, and/or failure. Do not use a damaged curl cord.  $\bigcirc$ OFailure to do so could result in fire, electric shock, and/or failure. When turning on the motor switch, firmly hold the handpiece. 0 OFailure to do so could make the handpiece hop, resulting in injury to the user or damage to the tool. Commutation sparks occur while the motor is running.  $\bigcirc$ So, do not use near inflammable and/or explosive substances such as thinner and/or gasoline. OFailure to do so could result in fire and/or failure. ■Do not touch the SENTAN TOOL while the motor is running.  $\bigcirc$ OFailure to do so could result in injury to the user or damage to the tool. Always wear safety glasses and a mask for dust. 0 OChips and/or dust left after grinding/polishing process could result in unexpected injury. Make sure whether or not the handpiece runs after switching on. 0 If the handpiece does not run after switching on, stop using it. OFailure to do so could cause the motor to be overheated, resulting in fire or failure.

## N Warning

In case of abnormal noise, smoke, and/or bad smell, turn off the main power and unplug the power cord. 0 OFailure to do so could result in fire and/or electric shock. Do not modify and/or disassemble the power pack.  $\bigcirc$ OFailure to do so could result in fire, electric shock, and/or failure. OAlso this may have a significant impact on its safety and performance Always ask us for repair. 0 OFailure to do so could result in fire, electric shock, and/or failure. OAlso this may have a significant impact on its safety and performance

🕂 Caution	
IUse the power pack in a place without condensation. OFailure to do so could result in fire, electric shock, and/or failure.	(
∎Use in temperature between 0 - 40°C. ⊙Failure to do so could result in malfunction and/or failure.	0
<b>IDo not use in a place near machines remarkably emitting electric noise.</b> OFailure to do so could result in malfunction and/or failure.	0
IFor maintenance, unplug the power cord for safety. OFailure to do so could result in electric shock and/or failure.	<b>Q</b>
Do not drop and/or hit. OFailure to do so could result in malfunction and/or failure.	0
Do not use in a place with corrosive gas such as chlorine gas, hydrogen sulfide, and/or sulfurous acid gas. OFailure to do so could result in fire, electric shock, and/or failure.	0
For disposal of this power pack, please follow your local city office or the shop where you purchased the product.	C
Do not allow children to use this product. Also, keep away from children.	0
When you leave the workshop, turn off the main switch, and unplug the power cord from the outlet for safety.	Ĩ
■Be careful for dust, oil, water not to enter the inside of the power pack. If entering, turn off the main switch and unplug the power cord. Then, ask us for repair. ⊙Failure to do so could result in fire, electric shock, and/or failure.	Q
When replacing carbon brushes or others, pull out the power cord. OFailure to do so could result in electric shock and/or failure.	C
Reverse rotation cannot be allowed.	C

# Contents Introduction

# Safety Precautions 1~2 Contents 3 1. Confirmation of this product ······· 3 5. Operating Procedure 5. 5-1 Connecting to Powerpack 5-2 Operation of Hand Switch 8. Lock Mechanism ------ 7 10. Precautions 11. Accessories 12. Trouble Shooting 8 13. Maintenance and inspection 8

#### Confirmation of this product

Please make sure of standard





Foot Switch

Handpiece D.C. A handpiece is only included.

AC Cord CA20/CA21CA22

D.C. POWER PAC

Except the handpiece, please purchase individually

fig-2

Hexagonal Wrench (HS-2.0) 1pc

fig-1

[Allowed Powerpack] C2012/C2112/C2212 Only (Minimo One Series Ver.2 since 2013) Not available with all the other powerpacks

# 2. Equioment Features

#### Hand Switch

- The hand switch enables quick start/stop operation.
- This is very useful if you often make the start/stop operation and/or you work away from the powerpack Mounting Handpiece Identification Resistor
- The handpiece mounts a handpiece identification resistor corresponded to the handpiece identification function on Minimo One Series Ver.2 powerpacks.

This function optimally controls rotation speed and torque of the handpiece.

## 

As the curl cord is elastic, it does not interrupt your work.

## 3. Specifications

#### fig-3.System configuration table

					Head							Clamp Head			Joint			
POWER PACK	Motor				H011	H021	H031	H041	H051	H211	H221	H231	H311	MX52	MX53	FX91	ET51	MG03
POWER PACK	One Series	Ver.2	Type	Max Speed	Standard	Slender	Heavy Duty	Long Slender	Air	Standard		/ Duty		Standard	Heav	/ Duty	Clamp	Reduction Ratio
	<u> </u>			[min <sup>-1</sup> ]					_	90		120°	type	-		_		Gear
	KV11H	KV112H	Ultrahigh	50,000	0	0			0					0				
	KV21H	KV212H	- · ·	40,000	0	0		0	0					0				
	KM11H	KM112H		35,000	0	0		0	0					0			0	
C2012	KM21H	KM212H		30,000	0	0	0	0						0	0	0	0	0
C2112	KV21	KV212	Medium	25,000	0	0		0						0			0	0
C2212	KM11	KM112		20,000	0	0		0						0	0	0	0	0
	KM21	KM212		15,000	0	0	0	0		0	0	0		0	0	0	0	0
	KM21L	KM212L	Low	8,000	0	0	0	0		0	0	0	0	0	Ó	0	0	0
	KM11G	KM112G	Low gear	6,600	0	0	0	0		0	0	0	0	0	0	0	0	0

 $\cdot \mathsf{O}$  is possible combinations of Head joint

	One Series	Ver.2	Type	Belt Speed [m/min]	Speed Range [times/min]
C2012 C2112	RE11	RE112	Reciproca	-	3,500
C2212	RE21	RE212	ting File	—	7,000
	BS31	BS312	Belt Sander	700	_

Over load function when the motor is locked • Danger avoidance function

The overload funciton will operate if its collet chuck opens or the load is stable.

#### ●Usual overload.

• Opened collet chuck.  $\Rightarrow$  Switch ON  $\Rightarrow$  Overload caution. (5 sec)  $\Rightarrow$  Overload(Stop)


- Over load in case that its collet chuck opens.
- Opened collet chuck.  $\Rightarrow$  Switch ON  $\Rightarrow$  15 sec  $\Rightarrow$  Overload caution. (5 sec)  $\Rightarrow$  Overload(Stop) • Trouble shooting in case that the danger avoidance function operates under constant load.

A constant load process(15 sec). ⇒ Overload caution. ⇒ Set to no-load condition within 5 seconds.
⇒ Danger avoidance function is reset.

%The time by the caution and the load displacement can be changed.Please ask to Minitor for changing.

## Names of Each Component

 $\begin{array}{c} () V-SHAPED SPINDLE \\ (2) BOWL SCREW RE35-264 \\ (3) LUBRICATE GATE \\ (4) BODY COVER RE1-203G \\ (5) COVER LOCK SCREW RE1-263 \\ (6) COVER LOCK SCREW RE1-263 \\ (7) HAND SWITCH \\ (8) HANDGRIP \\ (9) CURLED CORD CC7112 \\ (10) SCREW \end{array}$ 

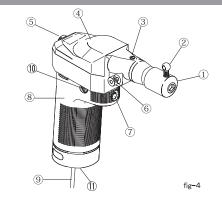

## 5 Operating Procedure

5-1. Connecting to Powerpack

Connect the curl cord properly with the powerpack.

Minimo One Series Ver.2 handpieces cannot be connected with the previous version powerpack including

#### 5-2. Operation of Hand Switch

The hand switch is for selection of the station to use and start/stop operation


When a station is not selected							
	When a station is selected						
		Operation	Movement				
1	-		The DC Motor output light is on.				
2			The motor starts to run.				
3	2	Press the hand switch.	The motor stops.				

▲ Caution When changing Sentan Tools, do not press the hand switch.

## Changing the SENTAN TOOL

The SENTAN TOOL is to be fixed by the bowl screw. The shank diameters from  $\Phi 2.0 \sim \Phi 6.35$ mm are able to be set. If the bowl screw is somewhat bother you, use set screw(4x8) instead.

To mount and dismount the SENTAN TOOL; To set the SENTAN TOOL is simply insert the tool and tighten the bowl screw. To remove the tool is just loosen the screw.

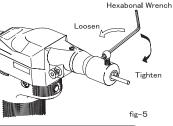

▲ After replacing the carbon brushes, give the handpiece a trial run, increasing rotation speed gradually and make sure how it works. ■Pull the curl cord out of the control pack.

## Adjust the Stroke Amplitude

 
The amplitude of the stroke can br set by changing the graduation scale on the eccentric collar.  $0mm \sim 8mm$  for RE112 ;  $0mm \sim 2mm$  for RE212.

①Remove the upper cover by loosening the cover screw. ②Loosen the set screw at the side of the marker.

③Adjust the matching mark to a desired graduation. The stroke is graduated in millimetters.

Then tighten the set screw to set.

④Put the upper cover back in position.



▲ Caution ▲ After replacing the carbon brushes, give the handpiece a trial run, increasing rotation speed gradually and make sure how it works. ■Pull the curl cord out of the control pack.

5

## Lock Mechanism

Turn the knurled knob clockwise for the spindle at a desired phase angle to be locked.



 


fig-7

# Replacement of Carbon Brush (Curl Cord)

 Pro	Procedure of replacement of carbon brushes						
	Procedure of replacement of a curl cord						
1	1	Pull the curl cord out of the powerpack.	-				
2	2	Remove the grip nut with a spanner (21mm).	fig-8				
3	3	Pull the curl cord connector out of the main body. Hold the resin part of the curl cord and pull out straight.	fig-9				
4	4	Remove the screw fixing the grip and take off the grip.	-				
5	-	Remove the screws fixing the carbon brushes and pull out the carbon brushes.	fig-10				
6	-	Set new carbon brushes as they were and tighten them with the screws.	-				
Ø	5	Put the grip in and tighten with the screw. (Put the grip in while caring the hand switch cord.)	-				
8	6	Fit the ${\rm curl}$ cord socket with the pins on the main body and insert on the straight. (If you replace the ${\rm curl}$ cord, do so at this time.)	fig-1 1				
9	$\bigcirc$	Tighten the grip nut with the spanner.	-				

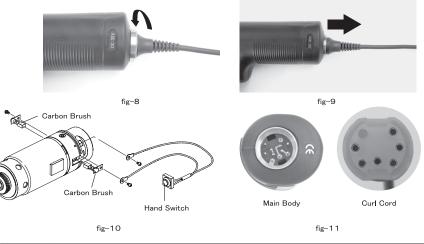



## 10. Precautions

- 1) Please be careful about heat that sometimes Recipron generates in continuous use.
- 2) Do not poke the installed tools in the front wall in operation. Recipron has structure that aborbs the impact, but it may damage the internal structure.
- 3) Do not provide grease other than the specified spot.
- 4) For safety, always put the body cover on the main body and tighten with the screw.
- 5) Please be careful when you use for grinding or polishing in wet process because it may cause some problems.

# 11. Accessories

Rubber Cradle RM11 Carbonbrush 1set (2pieces) KE-580 Hexagonal Wrench HS-2.0





 $\wedge$ 

## 12. Trouble Shooting

Condition	Investigation	Corrective action		
	Is an AC cord unplug?	Please plug an AC cord.		
Motor does not run.	Is a fuse blown?	Please replace e equivalent fuse.		
	Are the carbon brushes worn away?	Replace carbon brushes.		
Hand switch does not work.	Is a foot switch connected with the powerpack?	While a foot switch is connected with the powerpack, the start/stop operation is done only by the foot switch.		
Motor is overheated while running.	Do you use the handpiece with excessive loads?	Use the handpiece within the green lights of the load meter on the powerpack.		
Unusual noise and/or vibration occurs.	Make sure if the noise and/or vibration occurs when the handpiece runs in slow rotation speed.	Ask us for repair.		

XIf the symptom is not improved after corrective action, the handpiece might be defective. Please ask for repair. XAny other troubles or obscure points, please contact our minitor dealer.

### 13. Maintenance and inspection

- •RECIPRON requires lubrication with a few drops of light spindle oil through the lubrication gate, at intervals of 8 hours total operating time.
- When you do not use for a long time, provide spindle oil about 0.3cc (1 or 2 drops) in every 1 or 2 month.
- $\blacksquare Please check if there is some damage or not on the case and cord.$
- •Please check if there is accumulated dust, oil, water and so on or not.

 $\ensuremath{\ensuremath{\mathbb{X}}}\xspace{\ensuremath{\mathbb{P}}}\xspace{\ensuremath{\mathbb{R}}}\xspace{\ens$ 

▲ Warning ■Neglecting maintenance and inspection ,could result in accident and/or failure.